





GILFORD-JOHNSON
FLOORING

1-866-940-5603
tech@gilfordjohnson.com

What is a wood spline?

A wood spline is nothing more than a long, thin strip of wood that acts as a splice between two planks. It is the same thickness as the tongue side of a wood plank. Splines allow the flooring to be worked in opposite directions effectively cutting the installation time in half. Larger room areas over 30 ft. benefit from added center expansion and this is achieved by starting the installation at the center of the room using splines, following an establish chalkline (**fig1**). Splines should always be glued and nailed into place (**fig2**) .

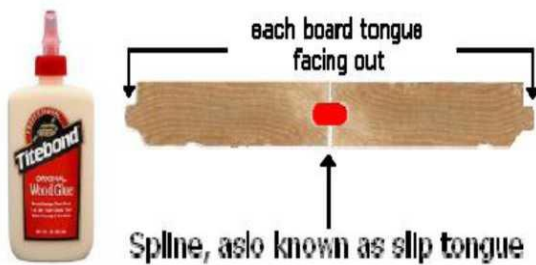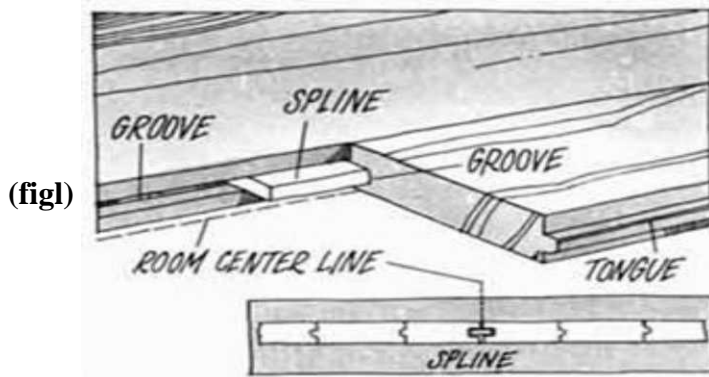

Gilford.Johnson stocks splines in 3/8" for 3/8" and 1/2" engineered, and 3/4" for solid hardwood flooring.

Item#

SPLINE 3/8

SPLINE-3/4